

Fitting Instructions:

Before commencing installation, ensure the vehicle is safely parked off the road with the handbrake on and the ignition off. Read these instructions carefully and retain for future reference. Check there is sufficient room for the aerial below the wing prior to fitting.

1. Whether using an existing mounting hole or creating a new one, the diameter of the hole required is 22mm.
2. Take off mounting nut, dome cover and dome.
3. From underneath the wing place the aerial through the hole and replace parts removed in the correct order.
4. Insert aerial cable into connector on radio and extend aerial to maximum height. If the lead is too short extend it with Ring 1m (AE1000), 2.5m (AE2500) or 4m (AE4000) extension cable.
5. Turn radio on and tune in a weak station, near 1400KHz on the AM band.
6. Adjust aerial trimmer, located on radio, for maximum volume.

It is recommended that any dirt, etc is removed at regular intervals and the aerial rubbed down with a damp cloth. This will ensure the aerial is kept in good working order.

All measurements are approximate