



NAB-900 ALTERNATOR BASIC INSTRUCTIONS

1. The primary power lead goes to the stud terminal with the yellow insulator.
2. The power lead that lights the battery indicator light on the dash is the "IND" terminal
3. If there is a radio noise suppressor it attaches to the "AUX" terminal